



# "IMPORTANT SAFETY INSTRUCTIONS"

"Read all instructions before using."

When using a sewing machine, basic safety precautions should always be taken, including the following:

# **DANGER** — To reduce the risk of electric shock.

- The sewing machine should never be left unattended while plugged in. Always unplug the sewing machine from the electrical outlet immediately after using and before cleaning.
- Always unplug before changing the light bulb. Replace bulb with same type rated 120V 15 watts.

# **WARNING** — To reduce the risk of burns, fire, electric shock, or injury.

- Do not allow this sewing machine to be used as a toy. Close attention is necessary when the sewing machine is used by or near children.
- Use this sewing machine only for its intended use as described in this manual. Use only accessories recommended by the manufacturer as contained in this manual.
- Never operate this sewing machine if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the sewing machine to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment.
- Never operate the sewing machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot control free from the accumulation of lint, dust, and loose cloth.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn the main switch to the symbol "O" position which represents off, then remove plug from outlet.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Always use the proper needle plate. The wrong plate can cause the needle to break.
- Do not use bent needles.
- Do not pull or push fabric while stitching. It may deflect the needle causing it to break.
- Turn off power to the machine by flipping the ON/OFF switch to the symbol "O" before making any adjustments in the needle area, such as threading the needle, changing the needle, threading the bobbin or changing the presser foot etc.
- Always unplug the sewing machine from the electrical outlet when removing covers, lubricating, or when making any other user servicing adjustments mentioned in the instruction manual.

**CAUTION** — This appliance has a polarized plug (one blade wider than the other) to reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way.

If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit. Contact a qualified electrician to install the proper outlet.

Do not modify the plug in any way.

# "SAVE THESE INSTRUCTIONS" "This sewing machine is intended for household use."

# CONGRATULATIONS ON CHOOSING A BROTHER SEWING MACHINE

Your machine is the home use sewing machine available.

To fully enjoy all the features incorporated into it, we suggest that you study this booklet.

#### PLEASE READ BEFORE USING YOUR SEWING MACHINE

#### For safe operation

- Be sure to watch the needle while sewing. Do not touch moving parts such as the balance wheel, thread take-up or needle while the machine is operating.
- Remember to turn off the power switch and unplug the cord when:
  - Operation is completed
  - · Replacing or removing the needle or any other parts
  - A power failure occurs during use
  - Maintaining the machine
  - Leaving the machine unattended
- Do not place anything on the foot controller.
- Plug the machine directly into the wall. Do not use extension cords.

#### For a longer service life

- When storing your sewing machine, avoid direct sunlight and high humidity locations. Do not store the sewing machine beside a space heater, iron, or other hot objects.
- Use only neutral soaps or detergents to clean the case. Benzene, thinner, and scouring powders can damage the case and machine, and should never be used.
- Do not drop or hit the machine.
- Always consult the operation manual when replacing or installing any accessories, the presser feet, needle, or other parts to assure correct installation.

#### For repair or adjustment


In the event that a malfunction occurs or adjustment is required, first follow the troubleshooting table in the back of the operation manual to inspect and adjust the machine yourself. If the problem persists, please consult your nearest authorized Brother service center.

Accessories	1
Names of Parts	2
Before You Begin	3
Tension Dial	
Power Cord and Foot Controller	3
Power Switch	3
Hand Wheel	
Stitch Length Regulator	
Reverse stitch lever	3
Presser Foot Lift Lever	4
Knee Lift	4
Pressure Adjustment Dial	
Flat Bed Extension Table	4
Thread Cutter Button	5
Needle Stop Position Button	5
Light Switch	
Feed Dog Adjustment Knob	5
Changing Needles and Light Bulb	6
Changing Upper Needle	6
Changing Feed Pin	
Changing Light Bulbs	

Threading	7
Bobbin Winding	7
Bobbin Insertion	8
Upper Threading	
Using the Automatic Needle Threader	
How to Pull Out the Bobbin Thread	10
Stitch Samples and Needle Chart	11
Stitch Samples	11
Thread Tension	
Changing Presser Feet	
Basic Sewing	
Basic Sewing	
Pin Feeding (for hard-to-handle fabrics)	13
Pin Feeding Unit	13
Rolled Hem Foot	14
Zipper Foot	15
Invisible Zipper Foot	16
Lining	16
Caring for Your Machine	17
Trouble Shooting	18

CONTENTS Accessories

# Accessories

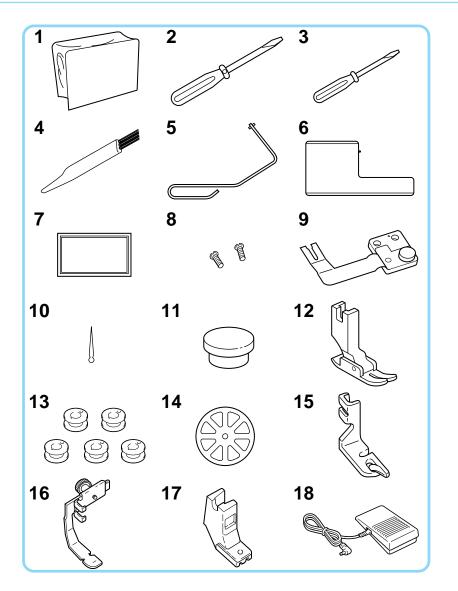


No.	Part Name	Part Code	
1	Cover		XA0917-052
2	Medium Screwdrive	er	125877-001
3	Small Screwdriver		125878-001
4	Cleaning Brush		XA4527-001
5	Knee Lift		XA0830-001
6	Flat Bed Extension	Table	X81029-001
7	Needles and Case	1 Size 9	
	(ORGAN HLX5)	2 Size 11	
		1 Size 14	X80805-001
		1 Size 16	
	1 Ballpo		
8	Lining Plate Screw	(2)	062670-812
9	Separater		184720-001
10	Feed Pin		138483-001
11	Feed Pin Remover		117934-009
12	General Purpose F	oot	XA1425-001
13	Bobbin (5)		100376-003
14	Spool Cap		XA2111-000
15	Rolled Hem Foot		X57138-001
16	Zipper Foot		112797-001
17	Invisible Zipper Foo	148475-001	
18	Foot Controller		XA3931-051

#### Note

Foot controller: Model N5V

This foot controller can be used for sewing machine model PQ1300.

# **Names of Parts**

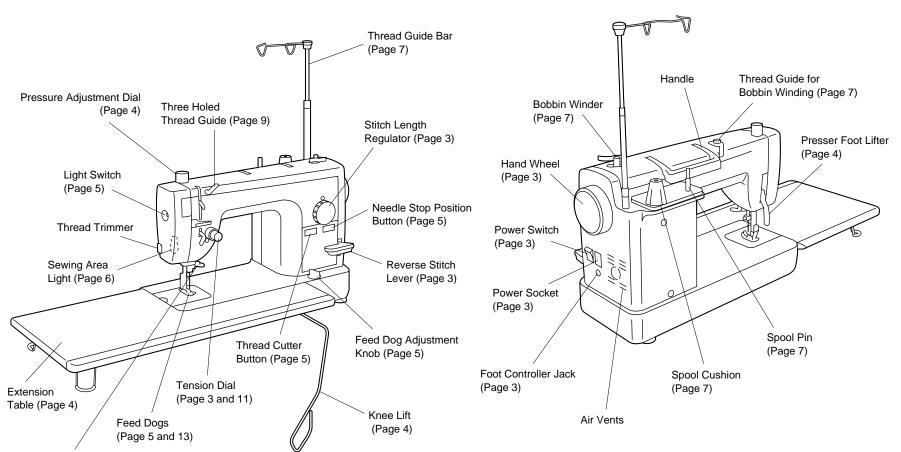

CONTENTS Accessories

Names of Parts

Before You Begin

Changing Needles and Light Bulb

Threading Samples and Needle Chart

Changing Presser Feet


Basic Sewing

Automatic Needle Threader (Page 9 to 10)

# **Before You Begin (1)**

## **Tension Dial**

- When tighter tension is desired. turn the tension dial to the right. Upper and bobbin threads will meat on right side of the fabric.
- When looser tension is desired, turn tension dial to the left. Upper and lower threads will then meet on wrong side of fabric.

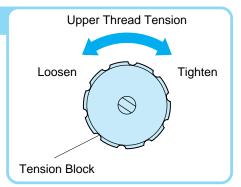

AC120V

## **Hand Wheel**

- Position needle using hand wheel.
- \* Always turn hand wheel towards you.



#### **Power Cord and Foot Controller**


#### ♠ Note

Please use common 120V household current.

- Plug in cord.
- Plug foot controller into machine.


#### Note

Foot controller: Model N5V This foot controller can be used for sewing machine model PQ1300.

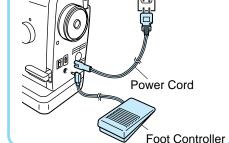


### **Power Switch**

- Flip power switch to "I" position to turn on.
- To switch power off, flip switch to "O" position.

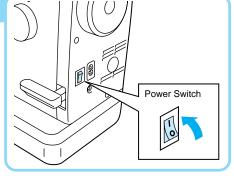


# **Stitch Length Regulator**

 Adjust desired stitch length using stitch regulator dial.

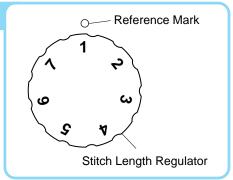

## **Reverse Stitch Lever**

- Sewing in reverse is possible when the reverse stitch lever is in the lowered position.
- \* Make sure to push the lever all the way down when reverse sewing is desired.

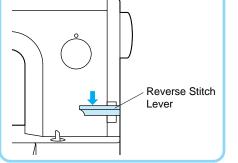


CONTENTS Accessories

Before You Begin

Changing Needles and Light Bulb


Stitch
Samples and
Needle Chart

- Lowering the presser foot lift lever lowers the sewing foot down onto the fabric.
- \* When working with heavy fabrics or other fabrics that don't slide easily under the foot, raise the presser foot lever to position the fabric.

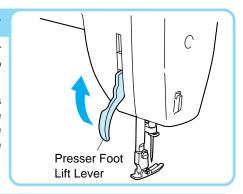



#### **Knee Lift**

 Using the convenient knee lift enables you to lift the presser foot easily leaving your hands free to work with the fabric.

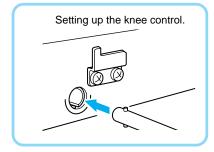

- \* Push the knee lift all the way in.
- \* When knee lift is not in use, it can rest at the bottom of the extension table.

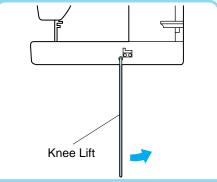


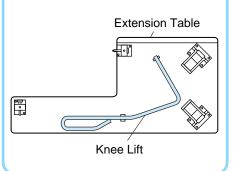

# **Pressure Adjustment Dial**


 Turning the pressure adjustment dial raises and lowers the pressure indicator needle.

See also: "Feed Dog Adjustment Knob" on page 5.

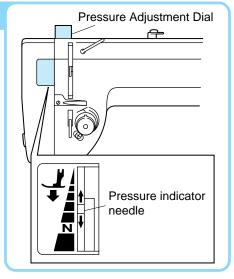

# **Flat Bed Extension Table**

• Lower table feet and attach extension table as shown in the below diagram.

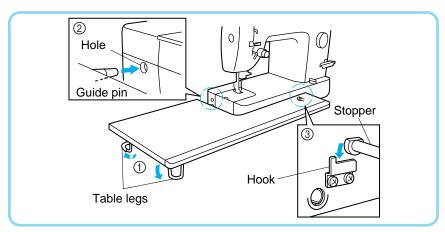

CONTENTS Accessories

Before You Begin

Changing Needles and Light Bulb

Threading Samples and Needle Chart


# **Before You Begin (2)**

## **Thread Cutter Button**

#### Note


When the machine stops due to jammed threads and so forth, do not step on the foot controller until turning the power off and moving the needle with the hand wheel to check the situation. Otherwise broken needles could result.

• The thread cutter trims upper and bobbin threads at the end of seams.




# **Needle Stop Position Button**

- When indicator lamp is lit up, the machine will stop sewing with the needle lowered through the fabric.
- When indicator lamp is off, position of the needle when sewing stops will be random.
- If the safety mechanism is activated, for example if the thread becomes tangled, the red lamp flashes.

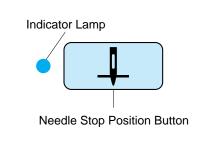

# **Light Switch**

 Push light switch to turn the light over the sewing area on and off.

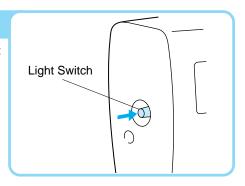


# **Feed Dog Adjustment Knob**

• Height of feed dogs can be adjusted to coincide with fabric weights.



# **Foot Pressure and Feed Dog Position**

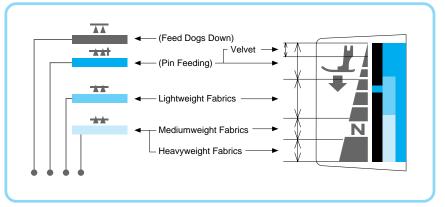

Select one of four feed dog positions according to your needs.

## Note

If a setting other than **\*\*** is selected, the feed pin will not operate.

CONTENTS Accessories

Before You Needles and Light Bulb

Threading Samples and Needle Chart

Changing Presser Feet

Basic Sewing

# **Changing Needles and Light Bulb**


#### ∧ Note


Please make sure power is off before carrying out the following operations. There is a chance of injury if the machine accidentally starts running during this operation.

# **Changing the Needle**

- (1) Turn the sewing machine off. Raise needle to highest position using hand wheel, and lower presser foot.
- (2) Loosen screw with screwdriver, and remove needle.
- ③ Insert new needle, and tighten screw. Make sure needle is screwed in tightly.

\* Check needles on a flat surface to make sure they're not bent.

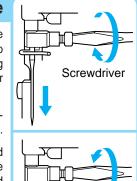

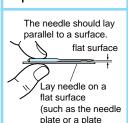


of glass).

#### Note

HLX5 needles should be uses; however, Schmetz 130/705H may also be used under normal circumstances.

# **Changing the Feed Pin**

- 1 Set the feed dogs to "velvet" position. (see Page 5)
- ② Remove needle, presser foot and needle plate.
- ③ Lower presser foot and turn hand wheel until feed pin is in its highest position.
- (4) Insert small screwdriver (included) as shown in diagram.




(5) While holding spring with fingertip, lower the feed pin changer onto the needle to pick it up.

- (6) Attach new feed pin to feed pin changer, lower and attach while holding spring with fingertip.
- (7) Remove screwdriver.
- (8) Re-attach needle plate, needle and presser foot.





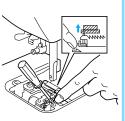




#### ▲ Note


Please make sure power is off before carrying out the following operation. The glass plate over the light bulb will be hot immediately after using the machine, so you should wait until the machine has had a chance to cool down before changing bulbs.

# **Changing Light Bulbs**

- 1 Turn off power.
- ② Remove screws from head.









® Re-attach head and tighten screw.



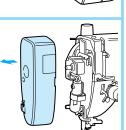


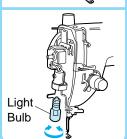



CONTENTS Accessories




Do not move bobbin stop while machine is running.

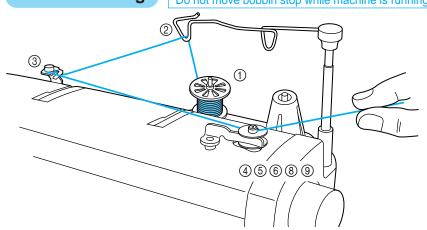

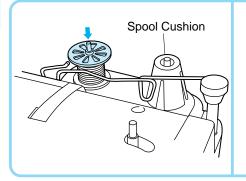


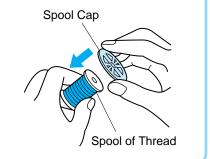


- 1) Put spool of thread on spool pin.
- \* Use spool cushion when using cross wound thread.
- \* Use spool cap when using parallelwound thread.

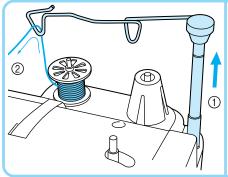


2 Lift thread guide bar all the way up, and run thread through triangular thread guide as shown in drawing.

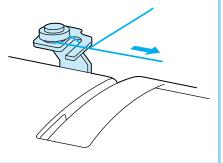

3 Run thread through bobbin winding thread guide as shown in drawing.

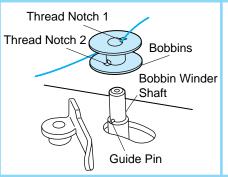

(4) Run thread through top thread notch, and align bottom thread notch with guide pin on bobbin winder shaft.

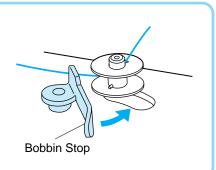



(5) Press bobbin stop up against empty bobbin.


CONTENTS Accessories

Before You Reedles and Light Bulb Threading




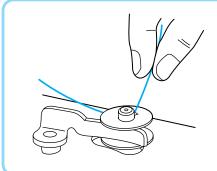




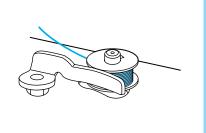

7 Stop winding when bobbin is full. Take foot of foot controller.

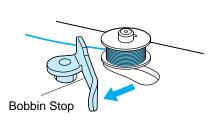

® Manually move bobbin stop back to original position.

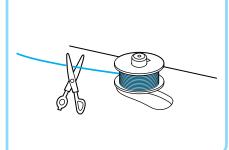


(9) Cut thread and remove bobbin.


# **Bobbin Insertion**

# ▲ CAUTION – Moving parts –

To reduce risk of injury, switch off before servicing. Replace cover.

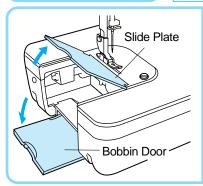


① Lift slide plate (and open bobbin door).

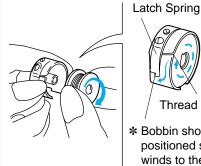


**Thread Notch** 

\* Bobbin should be positioned so it winds to the left

- ② Put bobbin into the bobbin case.
- \* Run thread through thread notch and under latch spring, so that a length of about 10 centimeters is exposed.

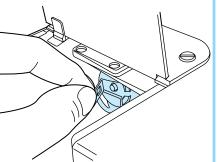


- ③ Pull the latch lever of the bobbin case out and push the bobbin case into the shuttle race and release the latch lever.
- \* If the latch lever is not all the way on the hook, it may fly off during sewing and cause lower thread breakage.

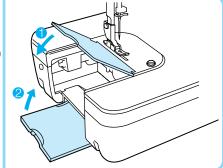


4) Lower slide plate and close bobbin door.

Note Please turn power is off before using automatic needle threader. Accidentally stepping on the foot controller during this operation could cause bodily injury or damage to the machine.

# **Upper Threading**

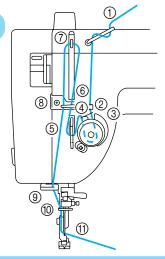

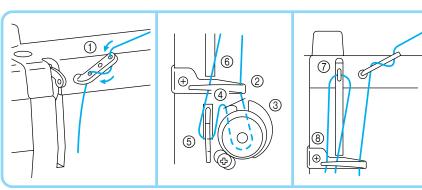

 Make sure thread take-up lever is in highest position and presser foot is up.


\* When using polyester, you should run the thread through all three holes of the thread guide.




If the thread is still twisted, run the thread through the holes backwards as shown in diagram.




# **Using the Automatic Needle Threader**

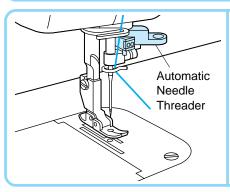


- ① Pull hand wheel towards you until needle is in the highest position, and lower presser foot.
- ② Take thread in your left hand, and gently pull it forwards.

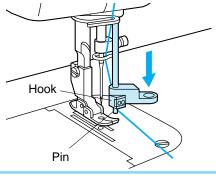

- 3 Lower automatic needle threader.
- Pull thread along the right side of the pin.

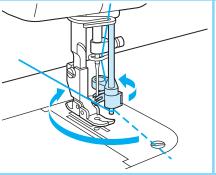

- 4 Catch thread with hook.
- Pull thread to the right, and make sure it has been caught with the hook.

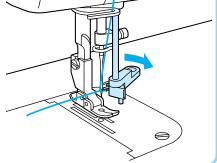

⑤ Raise needle threader lever while gently holding the end of the thread.

CONTENTS Accessories

Names c

Before You Begin

edles and

Threadin

Stitch Samples and Needle Chart


> Changing Presser Fe

> Basic Sewing

Your Machine

Trouble Shooting



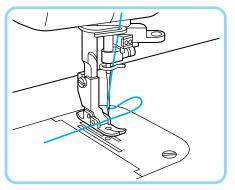



Needle (HLX5)	Thread
#9	#30 #50 #60
#11	#30
#14	#30
#16	#20


• The automatic needle threader cannot be used with the threadneedle combinations illustrated in the chart to the left. Transparent nylon thread can be used regardless of the chart, providing the needle used is a #14 or #16.

Pull loop to the right.

## How to Pull Out the Bobbin Thread

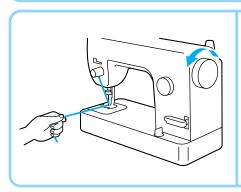

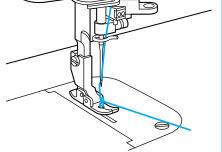

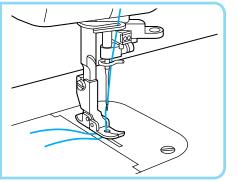


- \* Insert threaded bobbin in sewing machine and then begin.
- 1) While gently holding the end of the thread, turn the hand wheel towards you to raise the needle.
- \* Turn once to pull out the bobbin thread.
- (2) Pull out the bobbin thread.
- 3 Pull approximately 15 centimeters of upper and bobbin threads out.
- \* Lift foot and run both upper and bobbin threads under and behind presser foot.


# Stitch Samples and Needle Chart


# **Stitch Samples**

- 1) Set stitch length regulator to desired stitch length.
- 2 Make sure approximately 15cm of upper and bobbin threads are pulled out and laying behind presser foot. While needle is in raised position, insert a test strip from the garment fabric under the foot.
- ③ Lower presser foot.
- (4) Lower needle through fabric, then step gently on presser foot and begin.

- (5) Raise needle to highest point.
- (6) Lift needle, remove fabric and then cut thread.
- \* When using thread cutter:
- (5) Push thread cutter button
- (6) Lift foot and remove fabric.

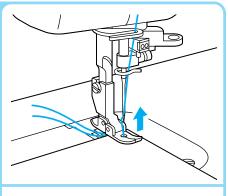


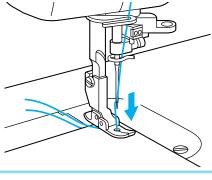

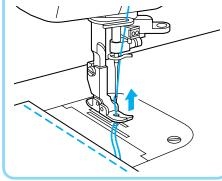

## **Thread Tension**

\* Bobbin thread should feed smoothly. Adjust bobbin thread to match that of upper thread. (If bobbin thread is too tight it may cause fabric to bunch up)

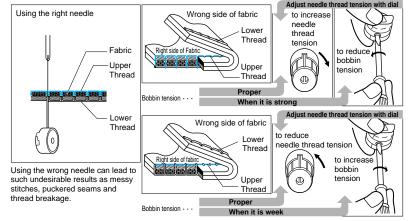

- Selecting the proper needle for use with the fabric and thread you are working with.
- \* The following chart applies to many different sewing methods.

	Fabric - Thread - Needles			HLX5	Schmetz
	Cloth	Thread	Needle (HLX5)	TILAS	130/705H
Special	Velvet	Silk, Polyester #30 – #50	#11 – #14	#9	#65
fabric	Synthetic Suede	Polyester #20 – #50	#11 – #16	#11	#75
Light	Lawn	Cotton #80		#14	#90
weight	Tricot	Polyester #60	#9	#16	#100
fabrics	Silk Georgette	Silk #50			
labiles	Wool Georgette	Silk, Polyester #50	#11		
Medium	Gingham	Cotton #60 - #80	#11 – #14		
weight	Lightweight Jersey	Polyester #60	- #11		
fabrics	Gabardine, Flannel	Silk #50	#11		
Heavy	Denim	Cotton #20 - #50	#14 – #18		
weight	Jersey	Polyester #20 – #50	444 446		
fabrics	Tweed	Silk #20 – #50	#11 – #16		

- \* HLX5 needles are recommended; however, Schmetz 130/705H needles may also be used under normal sewing conditions.
- \* Adjust pressure of sewing foot and drop feet height according to chart.
- \* When sewing on knit fabrics such as jersey or tricot, use a ballpoint needle or other needle designed for use with knit fabrics.


# **Changing Presser Feet**

A Note Make sure the power is off before changing presser feet.

# **Changing Sewing Feet** (Zipper Foot)

- 1) Raise presser foot, and raise needle to highest position.
- ② Loosen and remove screw using screwdriver.
- 3 Attach zipper foot and tighten screw.
- \* The same method is used for changing all sewing feet.

\* Use the position knob on back of the zipper foot to adjust position of foot in relation to needle.

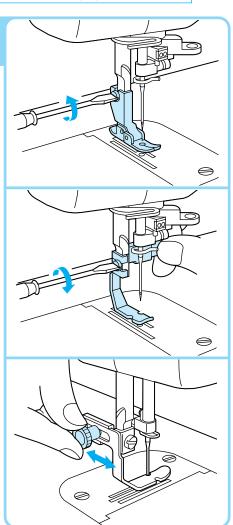

#### **Presser Feet**

#### Pin Feed Foot

For perfect stitching on otherwise difficult fabrics like velvet, leather and suede.

#### Regular Foot

This foot is used for most sewing. (Included with sewing machine.)

\* Can also be used with pin feeding

#### Rolled Hem Foot

Use on the edges of fabric, such as on hems of dress shirts, to fold the edge of the fabric in three while sewing.


#### Zipper Foot

Use to attach fasteners other than concealed fasteners.

Invisible Zipper Foot Use to attach concealed fasteners.














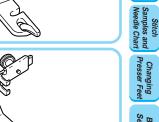




CONTENTS Accessories

Before You Begin


Changing Needles and Light Bulb

# **Basic Sewing (1)**


# **Basic Sewing**

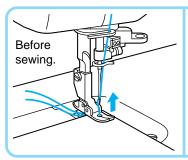

 Lift foot, pull about 15cm of upper and bobbin thread under and behind foot, and position fabric under foot.

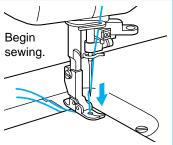

- ② Lower foot.
- While needle is pierced all the way through fabric, step gently on foot controller

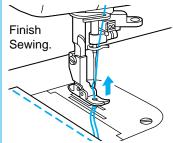


- ④ Raise needle to highest position.
- ⑤ Lift foot, remove fabric and cut thread.
- \* When using thread trimmer:
- 4 Push thread trimmer button (this will cause the upper and bobbin threads to be cut automatically and the needle to stop in a raised position.)
- ⑤ Lift presser foot and remove fabric.



- ① Make sure needle is pierced all the \* way through fabric.
- ② Lift presser foot, and turn fabric using needle as an axis.
- ③ Lower foot and continue sewing.


Reinforcement stitches



At the beginning of a seam, sew a few stitches with the hand wheel, hit the reverse stitch button and sew a few stitches back to reinforce your seam, then go back to normal sewing and finish the seam. Do the same at the end of a seam.


# Pin Feeding (for hard-to-handle fabrics)

Fabric: Velvet Synthetic Suede Others

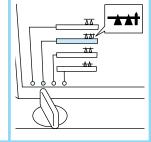


The above fabrics ① Mo can be sewed neatly by sewing by pin feeding.

Move feed adjustment knob to pin feeding position.





② Adjust pressure adjustment dial until indicator needle is in the right position.

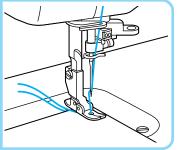

③ Gently pull thread until feed pin catches fabric and sew.

# **Pin Feeding Unit**

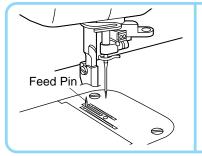

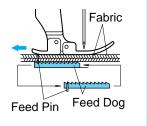

The feed pin passes up through all layers of fabric moving with the feed dog's motion to feed all layers of the fabric evenly.

\* Feed pin is automatically lowered when presser foot is raised.

9

CONTENTS Accessories

Names of Parts

efore You

Changing
Needles and
Light Bulb

g Samples Needle C

Changin Presser F

Basi Sewii

Your Machin

Trouble Shooting


# **Basic Sewing (2)**

Note Make sure power is off before changing feet.


## **Rolled Hem Foot**

- 1) Attach rolled hem foot.
- \* Refer to page 12 for instructions on changing sewing feet.
- ② Insert needle approximately 0.5cm from the edges of the fabric and sew 2-3 stitches.
- 3 Raise needle and foot, pull fabric towards you while gently holding thread in left hand.


(4) Gently pull strands of thread behind foot as shown.

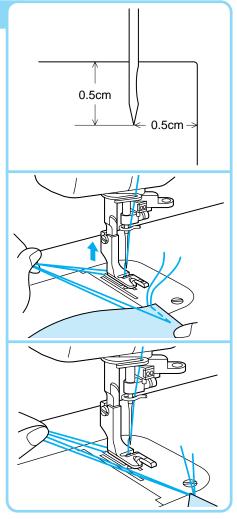

(5) While holding threads with left hand, position fabric under foot with right hand so the edge of the fabric lies directly under the needle.



(7) Fold hem over about .5 cm and continue feeding folded hem under foot while sewing.

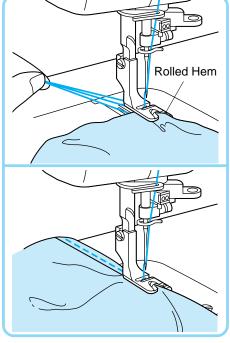

CONTENTS Accessories

Stitch Samples and Needle Chart


# Basic Sewing (3)

#### ♠ Note

Make sure power is off before changing feet.

# **Zipper Foot**

- 1 Attach zipper foot.
- ② Turn hand wheel to lower needle and adjust position of foot to needle.
- 3 Line up zipper to the section of fabric it will be attached to, and mark the base of the opening on the fabric. It should be set approximately .5 centimeters below zip stop.
- (4) Fold hem about .2 cm from mark, and make a mark along the edge.

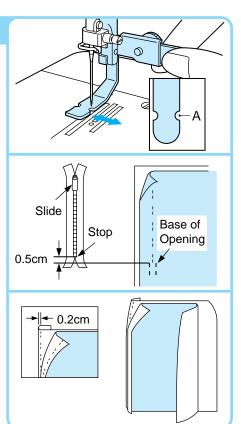



(5) Sew zipper onto fabric along mark.


(6) Line up folded seam to stitches.





- (8) Turn hand wheel to lower needle and make sure the needle and position of the foot are lined up properly.
- (9) Baste zipper onto fabric and sew along edge with fabric right side
- \* Reinforce base of opening by sewing over it twice.
- \* If the zipper slide gets in the way, lower the needle all the way through the fabric, lift the foot, and move the slider out of the way.



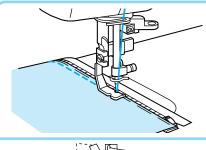

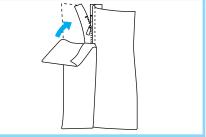

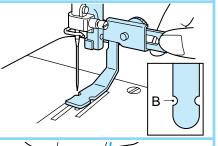

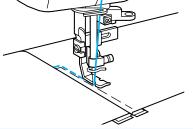


CONTENTS Accessories





- ① Attach invisible zipper foot.
- ② Alight zipper with fabric. Mark the base of the opening approximately 2 cm above the end of the zipper.

- ③ Fold the area to be sewed.
- 4 Line up zipper with fabric on the wrong side of the fabric, open zipper, and baste zipper to the fabric.

- (5) Sew the zipper to the fabric with the wrong side of the zipper and fabric up.
- When sewing with the teeth to the right, the left side of the foot should line up with the left teeth of the zipper.

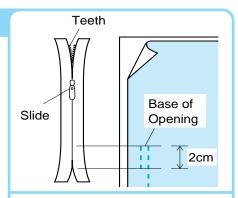


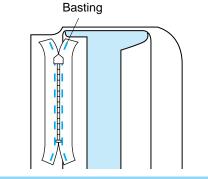


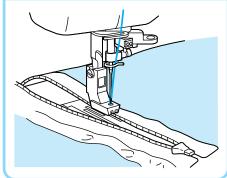


# Lining

- 1 Raise needle and foot.
- ② Move separater so it sits under presser foot.
- ③ Make sure it is lined up so that the needle passes through the slot of the separater without hitting the plate itself.
- (4) Secure liner plate in place with lining plate screws.
- ⑤ Set pressure of sewing feet and feed position to pin feeding position.
- ⑤ Pull thread until lower needle catches fabric.
- \* Sew 2-3 reinforcement stitches.
- When not using separater, it can be swung off to the side as illustrated in drawing.

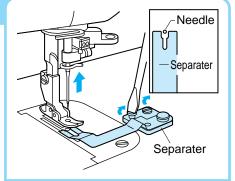

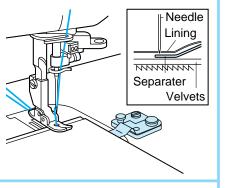

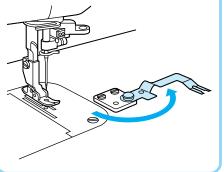

CONTENTS Accessories

les Names

Begin

and Threading

Stitch
Samples and
Needle Chart

Changing Presser Fe

Basic Sewing

Caring for Your Machine

Trouble Shooting

# Caring for Your Machine


#### Note


Make sure power is off before cleaning sewing machine.


- ① Turn machine off.
- ② Remove foot.

③ Remove needle plate.


- (4) Clean out dust and thread scraps.
- \* Thread scraps can be swept out through the bobbin door.

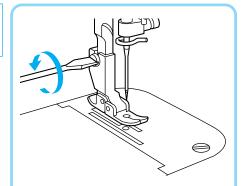

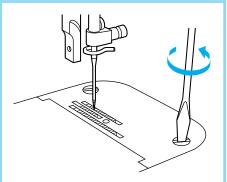

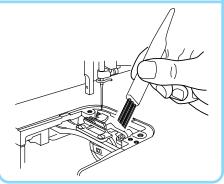

- (5) When the area under the needle plate is cleaned out, oil hook of bobbin case with sewing machine oil.
- (6) Attach needle plate and foot.

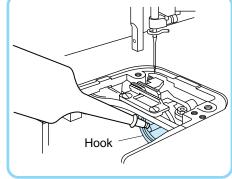

#### **■** Keep Your Sewing Machine Clean

Please use a soft, dry cloth to wipe off light dirt and dust. If sewing machine is very dirty, wipe with a cloth soaked in warm water, or in warm water containing a neutral detergent. Then wipe off any detergent residue, and wipe off water with a dry cloth.



Please keep sewing machine away from heat sources such as irons and space heaters. Do not use chemicals like benzine or thinner to clean your machine. When machine is not in use, please keep machine out of direct sunlight.



Item	Specification		Item	Specification	
Sewing Speed	4 000 -44-	L		Height of feed dog	0.7mm 1.1mm
(maximum)	1,300 stito	nes per m	inute	Height of	2
Stitch Length	0	7		lower needle	3mm – 3.5mm
(pitch)	0 – 7mm		Needles that	HLX5#9 – #16	
Stroke of	04.4		may be used	SCHMETZ 130/705H #65 – #100	
Needle	34.1mm		Bed dimensions	439mmX178mm	
Stroke of			Total weight	10kg	
Thread Take-	61.4mm		Motor	120V 60Hz	
Up Lever			Sewing Light	120V 15W 60Hz	
	Foot Lift	One	6mm	Sewing area	595mmX285mm
Foot Height	1 OOL LIIL	Two	9mm		
	Knee control Over 10mm				

CONTENTS Accessories

# **Trouble Shooting**

\* Before taking your sewing machine in for service, check the following chart. Upper threading is not Upper thread tension is **Thread** Thread is getting tangled. Wrona needle. Bobbin case is scratched. threaded correctly. too high. If you See chart on p.11 for the right Breakage Re-thread machine Rethread machine Remove needle plate and shop where Clean bobbin case and Reduce tension. needle to use with your fabric check bobbin case. properly. under needle plate. and thread. Bobbin thread is not passing still cannot find Bobbin case is scratched **Bobbin Thread** Thread is getting tangled. Bobbin tension is too high. correctly from bobbin case. Reinsert bobbin Remove needle plate and **Breakage** Clean bobbin case and Reduce tension. properly. check bobbin case. under needle plate. you purchased Needle is not attached Needle is bent, or tip is Area under needle plate Machine is not threaded Skipped Wrong needle. correctly. needs to be cleaned. dulled. properly. See chart on p.11 to choose the Clean feed dog and **Stitches** Reattach. needle that best fits your Change needles Rethread machine. bobbin case. fabric-thread combination the Wrong needle for the fabric Upper thread tension is You're sewing a lightweight fabric with **Fabric** Threading is incorrect. Bobbin tension is too high. and thread you are using. feed dogs in heavyweight position. too hiah. problem, See chart on p.11 to choose the **Puckers** Rethread machine. needle that best fits your Reduce tension. Reduce tension. Adjust feed dogs. <u>;</u>=: fabric-thread combination. or to Pressure of sewing foot Sewing heavyweight fabric with feed dogs in lightweight fabric **Fabric Won't** Stitch length is too short. Thread is getting tangled is too weak. pleas **Feed Properly** Rethread machine. Clean needle your nearest Brother dealer for repair. Adiust stitch lenath Adjust foot pressure. Adjust feed dogs. plate and bobbin case. Upper threading is Thread is not passing through Ö Loop In Wrong needle. incorrect. bobbin case correctly take Re-thread machine See chart on p.11 for the right Seam Reset bobbin case. needle to use with your fabric properly. and thread your sewing Needle is not attached You're pulling the fabric Needle Wrong needle. Wrong needle. correctly. too hard. See chart on p.11 for the right Pull the fabric **Breakage** Reattach. Change needles. needle to use with your fabri and thread. more gently. The foot controller has Sewing Machine Machine's not plugged in. The power isn't on. come unplugged. machine Doesn't Run Check to make sure the Turn the power on. Reattach foot controller. machine's plugged in. The area under the needle Machine Is plate needs to be cleaned. into Clean feed dog and **Noisy** bobbin case. Needle is not raised Hook of needle threader doesn't Automatic Needle Wrong needle for the all the way up. thread you're using. pass through eye of needle. Threader Doesn't Turn hand wheel to Check to make sure the Work See chart on p.10. raise needle. hook isn't bent. Needle is not properly Needle is bent, or tip is Area under needle plate Upper threading is Wrong needle. **Thread Cutter** attached. dulled. needs to be cleaned. incorrect. See chart on p.11 to choose the Doesn't Work Clean feed dog and Change needles Reattach. needle that best fits your Rethread. bobbin case. fabric-thread combination.

cessories Names of Parts

of Before You Begin

Changing Needles and Thre Light Bulb

Threading Samples and Needle Chart

Changing Presser Feet

ic ...

Shoot

# Memo

# NOUS VOUS REMERCIONS D'AVOIR CHOISI LA MACHINE A COUDRE ELECTRONIQUE BROTHER.

Il s'agit de la machine à coudre domestique la plus sophistiquée pour son automatisme.

Cependant, nous vous conseillons la lecture de ce fascicule afin de profiter pleinement de toutes les fonctions intégrées.

#### RECOMMENDATIONS AVANT D'UTILISER VOTRE MACHINE A COUDRE BROTHER

#### Précautions d'utilisation

- Surveiller l'aiguille pendant la couture. Ne pas toucher le volant, le releveur de fil, l'aiguille ou les autres parties en mouvement.
- Se rappeler qu'il faut éteindre la machine et débrancher le cordon secteur quand:
  - l'utilisation est terminée
  - vous remplacez ou échangez l'aiguille ou toutes autres pièces
  - une panne de courant se produit en cours d'utilisation
  - vous faites l'entretien et la lubrification de la machine
  - vous laissez la machine sans surveillance
- Ne rien poser sur la pédale de commande.
- Brancher directement la machine dans la prise murale. Ne pas utiliser de rallonge électrique.

#### Pour une vie prolongée de votre machine

- Ne pas ranger votre machine dans des endroits exposés au soleil et très humides. Ne pas ranger votre machine à coudre à proximité d'un appareil de chauffage, d'un fer à repasser, ou de tout autre appareil dégageant de la chaleur.
- Utiliser seulement des savons ou des détergents neutres pour nettoyer le coffret de la machine. Ne jamais utiliser de benzine, de diluants, de décapants, car ces produits risquent endommager le coffret et la machine.
- Ne pas laisser tomber ou heurter la machine.
- Toujours consulter le manuel d'instructions lors de l'installation des pieds presseurs, des aiguilles et des autres dispositifs afin d'effectuer une installation correcte.

#### Pour la réparation et le réglage

Dans le cas d'une anomalie ou lorsqu'un réglage est nécessaire, se rapporter au chapitre "Résolution des problèmes" afin d'inspecter et de régler vous-même la machine. Si le problème persiste, consultez votre revendeur Brother.


CONTENIDO Accessoires pièces

# CONTENIDO-

Accessoires	_ 22
Nom des pièces	_ 23
Avant de commencer	_ 24
Sélecteur de tension	_ 24
Cordon d'alimentation et pédale	_ 24
Interrupteur d'alimentation	24
Volaut	24
Sélecteur de lougueur de point	24
Levier de poiut arriére	24
Levier du pied-de-biche	25
Levier de levage au genou	_ 25
Sélecteur de réglage de pression	
Table d'exteusion plate	_ 25
Bouton de ciseaux	_ 26
	_ 26
Interrupeur de lampe	26
Boutou de réglage des griffes d'entraînement	26
Remplacement de l'aiguille et de l'ampoule de lampe	
Remplacement de l'aiguille	27
Remplacement de lérgot d'eutraînement	27
Remplacement de l'ampoule	27

Enfilage	28
Remplissage de la canette	28
Insertion de la canette	29
Mise en place du fil supérier	
Utilisation de lénfileur automatique	
Comment sortir le fil de la canette	31
Points d'essai et tableau d'aiguilles	32
Points d'essai	32
Tension des fils	
Changement du pied-de- biche	
Couture de base	34
Couture de base	34
Entaînement par ergot	
(pour les tissus difficiles à manipuler)	34
Ergot d'eutraînemeut	34
Pied pour ourlet rouleauté	35
Pied pour fermeture à glissière	36
Pied pour fermeture à glissière tnvisible	37
Doublure	37
Entretien de la machine à coudre	38
Dépannage	39

# Accessoires

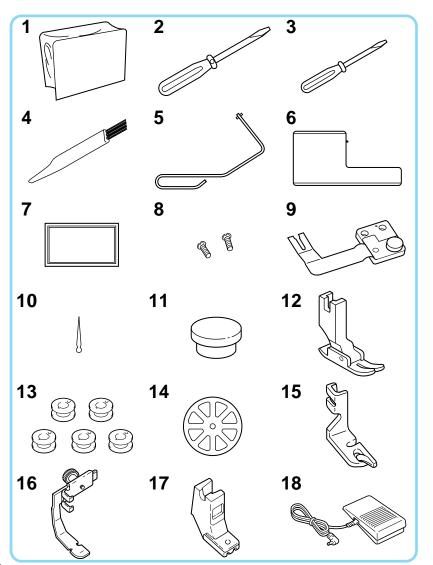

No. de pièce	Désignation		Code de pièce
1	Couvercle		XA0917-052
2	Tournevis moyen		125877-001
3	Petit tournevis		125878-001
4	Brosse de nettoyage	Э	XA4527-001
5	Levier de levage au	genou	XA0830-001
6	Table d'extension pl	ate	X81029-001
7	Aiguilles et boîte	1 Taille 9	
	(ORGAN HLX5)	2 Taille 11	
		1 Taille 14	X80805-001
		1 Taille 16	
	1 aiguill	e à pointe-bille	
8	Vis de plaque de do	ublure (2)	062670-812
9	Séparateur		184720-001
10	Axe d'avance		138483-001
11	Extracteur d'axe d'a	vance	117934-009
12	Pied à usage généra	al	XA1425-001
13	Canette (5)		100376-003
14	Capuchon de bobine		XA2111-000
15	Pied pour ourlet rouleauté		X57138-001
16	Pied pour fermeture à glissière		112797-001
17	Pied pour fermeture à glissière invisible		148475-001
18	Pédale du rhéostat		XA3931-051

#### Remarque


Pédale du rhéostat : Modèle N5V

Cette pédale du rhéostat peut être utilisée avec la

machine à coudre modèle PQ1300.


# Nom des pièces

(Pages 30 et 31)

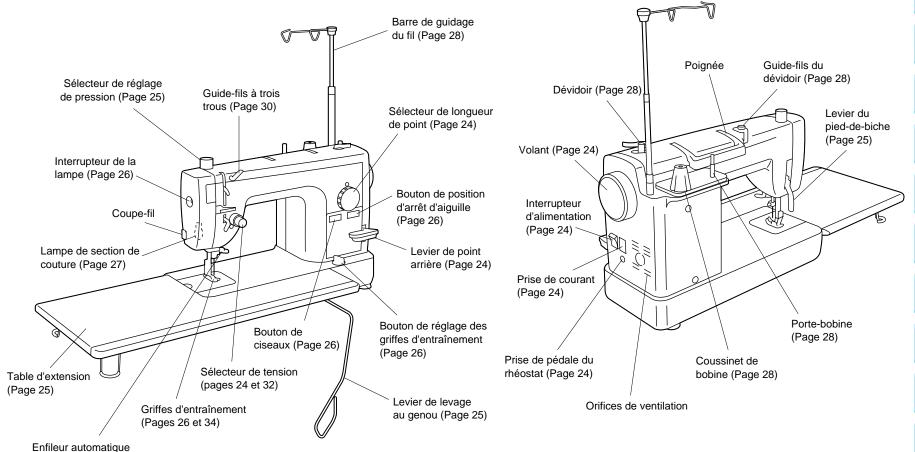

## Sélecteur de tension

- Pour accroître la tension, tourner le sélecteur de tension vers la droite. Le fil supérieur et le fil de la canette se rejoignent sur le bon côté du tissu.
- Pour réduire la tension, tourner le sélecteur de tension vers la gauche. Le fil supérieur et le fil de la canette se rejoignent sur le mauvais côté du tissu.

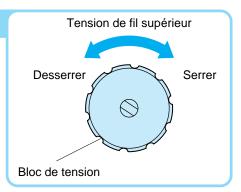

AC120V

Cordon d'alimentation

Pédale de rhéostat

## Cordon d'alimentation et pédale

#### **A** Remarque

Utiliser un courant secteur 120 V domestique ordinaire.


- Brancher le cordon.
- Brancher la pédale sur la machine.

#### Remarque

Pédale de rhéostat : Modèle N5V Cette pédale du rhéostat peut être utilisée avec la machine à coudre modèle PQ1300.


# Interrupteur d'alimentation

- Basculer l'interrupteur sur la position "I" pour allumer la machine à coudre.
- Pour éteindre la machine, basculer l'interrupteur sur la position "O".

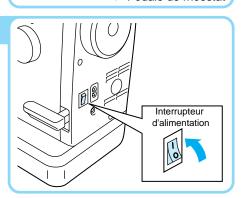


### **Volant**

- Positionner l'aiguille à l'aide du volant.
- \* Toujours tourner le volant vers soi.

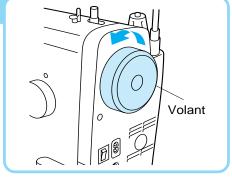


# Sélecteur de longueur de point

 Régler la longueur de point à l'aide du sélecteur de longueur de point.

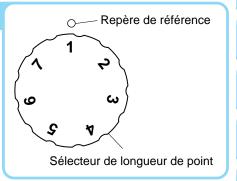

# Levier de point arrière

- Pour coudre en marche arrière, abaisser le levier de point arrière.
- Bien abaisser le levier de point arrière à fond pour coudre en marche arrière.

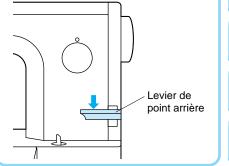

CONTENIDO Accessoires

Nom des pièces

Remplacen
l'aiguille
er l'ampoule d

Enfilage

Points d'essai et tableau d'aiguilles

Changement du pied-de- biche


couture de base

a machine à coudre

Dépannag


# Levier du pied-de-biche

- Abaisser le levier du pied-debiche pour abaisser le pied-debiche sur le tissu.
- \* Pour travailler dans du tissu lourd et des tissus qui ne glissent pas facilement sous le pied, relever le levier du pied-de-biche pour placer le tissu.

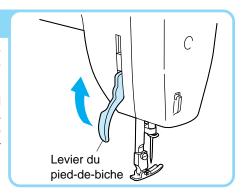



# Levier de levage au genou

• Le levier de levage au genou est pratique pour relever le pied-debiche sans retirer les mains du tissu.

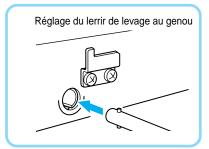

- \* Appuyer à fond sur le levier de levage au genou.
- \* Lorsqu'on ne se sert pas du levier de levage au genou, on pourra le laisser sur l'envers de la table d'extension.

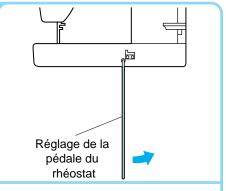


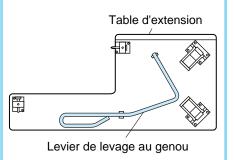

# Sélecteur de réglage de pression


 Tourner le sélecteur de réglage de pression pour faire monter et descendre l'aiguille de l'indicateur de pression.

Voir également : "Bouton de réglage des griffes d'entraînement", page 26.

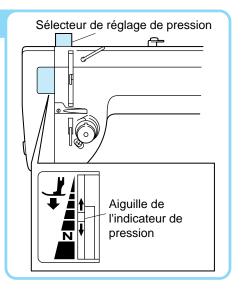

# Table d'extension plate

• Abaisser les pieds de table et fixer la table d'extension comme indiqué sur le schéma ci-dessous.

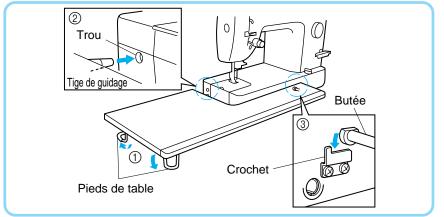


#### **Bouton de ciseaux**

## **A** Remarque

Si la machine s'arrête, parce que les fils sont emmêlés par exemple, ne pas appuyer sur la pédale tant que la machine n'est pas éteinte et l'aiguille déplacée à la main pour vérifier la situation. Sinon l'aiguille risque de se casser.

 Les ciseaux coupent le fil supérieur et le fil de la canette à la fin des coutures.




# Bouton de position d'arrêt d'aiguille

- Quand le voyant est allumé, la machine arrêtera la couture lorsque l'aiguille sera abaissée et enfoncée dans le tissu.
- Si le voyant est éteint, la position de l'aiguille au moment de l'arrêt de la couture sera aléatoire.
- Si le mécanisme de sécurité s'est déclenché, par exemple si le fil est emmêlé, le voyant rouge clignote.

# Voyant indicateur Bouton de position d'arrêt d'aiguille

# Interrupteur de lampe

 Appuyer sur l'interrupteur pour allumer et éteindre la lampe sur la section de couture.

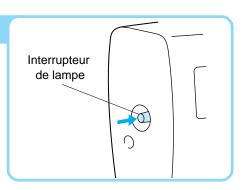


## Bouton de réglage des griffes d'entraînement

 Il est possible de régler la hauteur des griffes d'entraînement en fonction du poids du tissu.



# Pression du pied-de-biche et position des griffes d'entraînement

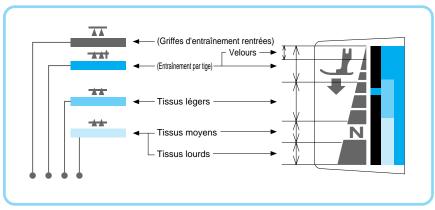

Sélectionner l'une des quatre positions de griffes d'entraînement, en fonction des besoins.

#### Remarque

Si l'on sélectionne un réglage autre que **\*\*\***, l'ergot d'entraînement ne fonctionnera pas.

CONTENIDO Accessoires

Nom des pièces

ant de mencer

Ent

Points d'essa et tableau d'aiguilles

Changement du pied-de- biche

Couture de base

la machine à coudre

Dépannag


# Remplacement de l'aiguille et de l'ampoule de lampe


### **A** Remarque

Bien éteindre la machine à coudre avant d'effectuer les opérations suivantes. Sinon, la machine risque de se mettre en marche accidentellement et de provoquer des blessures.

# Remplacement de l'aiguille

- ① Eteindre la machine. Relever l'aiguille sur la position de levage maximal à l'aide du volant, et abaisser le pied-de-biche.
- ② Desserrer la vis avec un tournevis et retirer l'aiguille.
- ③ Insérer la nouvelle aiguille et visser à fond. S'assurer que l'aiguille est bien vissée à fond.
- Vérifier les aiguilles sur une surface plane pour s'assurer qu'elles ne sont pas tordues.

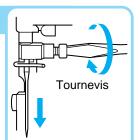

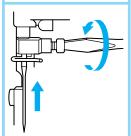

rapport à une surface plane.

Surface plane

(Poser l'aiguille sur une surface plane (par exemple la plaque à aiguille ou une plaque de verre).


L'aiguille doit être parallèle par

#### Remarque

Utiliser des aiguilles HLX; toutefois, on pourra également utiliser des aiguilles Schmetz 130/705H dans des conditions normales d'utilisation.

## Remplacement de l'ergot d'entraînement

- 1 Régler les griffes d'entraînement sur la position "velours". (Voir Page 26.)
- ② Retirer l'aiguille, le pied-debiche et la plaque à aiguille.
- 3 Abaisser le pied-de-biche et tourner le volant jusqu'à ce que l'ergot d'entraînement soit à la position de levage maximale.
- 4 Insérer le petit tournevis (fourni) comme indiqué sur le schéma.



- ⑤ Tout en tenant le ressort du bout des doigts, abaisser le changeur d'ergot d'entraînement sur l'aiguille pour relever la tige.
- (§) Fixer un nouvel ergot d'entraînement au changeur d'ergot d'entraînement, abaisser et fixer tout en tenant le ressort du bout des doigts.
- (7) Retirer le tournevis.
- ® Remonter la plaque à aiguille et le pied-debiche.









#### **A** Remarque


Bien éteindre la machine à coudre avant d'effectuer les opérations suivantes. La plaque de verre qui abrite l'ampoule de lampe est chaude quand on vient d'utiliser la machine ; en conséquence, attendre que la machine ait refroidi avant de remplacer l'ampoule.

## Remplacement de l'ampoule


- 1 Eteindre la machine.
- ② Retirer les vis de la tête.



③ Retirer la tête.

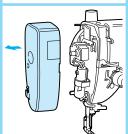



- 4 Dévisser l'ampoule et la retirer.
- ⑤ Visser une nouvelle ampoule, de capacité nominale de 120 V, 15 W.
- ⑥ Remonter la tête et visser à fond.

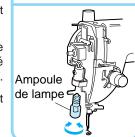


## **A** Remarque


Ne pas déplacer la butée de canette pendant que la machine fonctionne.

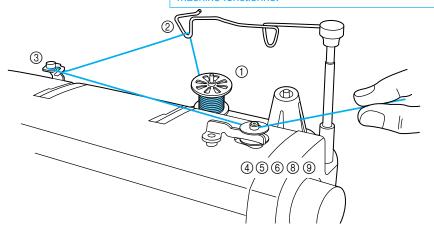

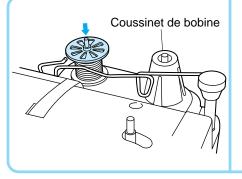


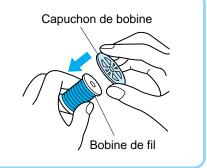


- ① Mettre la bobine de fil sur le portebobine.
- \* Avec un fil enroulé croisé, utiliser le coussinet de bobine.
- \* Avec un fil enroulé parallèlement, utiliser le capuchon de bobine.

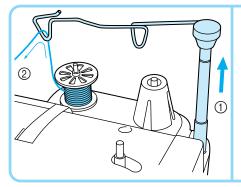


② Relever la barre de guidage du fil au maximum et faire passer le fil dans le guide-fils triangulaire comme indiqué sur le schéma.

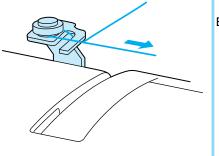

③ Faire passer le fil dans le guide-fils du remplissage de canette comme indiqué sur le schéma.

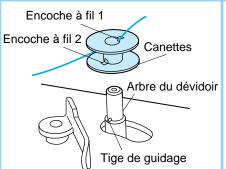

④ Faire passer le fil dans l'encoche à fil supérieure et aligner l'encoche à fil inférieure sur la tige de guidage de l'arbre du dévidoir.

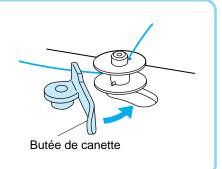

⑤ Appuyer sur la butée de canette contre la canette vide.

CONTENIDO Accessoires

oires Nom

om des pièces c

> Remplacem l'aiguille e

Enfila


Points d'essa et tableau d'aiguilles


Changement du pied-de- biche


outure de base


la machine à coudre



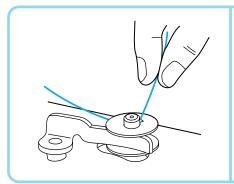

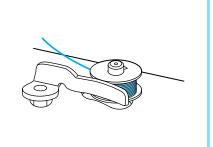

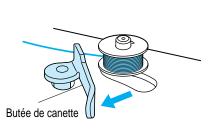

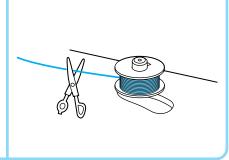


- 6 Tout en tenant l'extrémité du fil, appuyer sur la pédale pendant quelques secondes. Quand il s'est enroulé suffisamment de fil sur la canette pour que le fil reste en place, relâcher la pédale et couper l'excédent de fil.
- 7) Cesser d'enrouler le fil lorsque la canette est pleine. Retirer le pied de la pédale.
- ® De la main, ramener la butée de canette sur sa position d'origine.
- (9) Couper le fil et enlever la canette.


## Insertion de la canette

▲ Attention – Déplacement des pièces –


Pour éviter tout risque de blessure, bien éteindre la machine avant toute opération d'entretien. Remettre le couvercle en place.

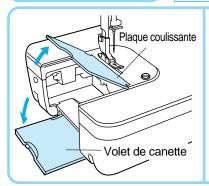

- 1) Soulever la plaque coulissante (et le volet de la canette).
- Ressort de verrouillage Encoche à fil \* La canette doit être placée de façon qu'elle se bobine vers la gauche.
- 2) Mettre la canette dans le boîtier de la canette.
  - \* Faire passer le fil dans l'encoche à fil et sous le ressort de verrouillage de façon qu'il ressorte environ 10 centimètres de fil.

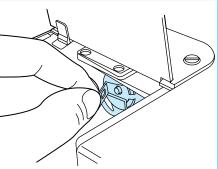



- (3) Tirer sur le levier de verrouillage du boîtier de la canette, enfoncer le boîtier de la canette dans la coursière de navette et relâcher le levier de verrouillage.
- \* Si le levier de verrouillage n'est pas complètement sur le crochet, il risque de se dégager pendant la couture, ce qui pourrait casser le fil inférieur.

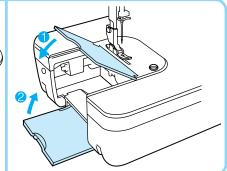

(4) Abaisser la plaque coulissante et refermer le volet de la canette.

# Mise en place du fil supérieur

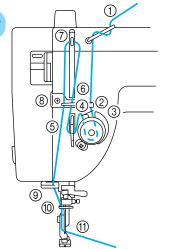

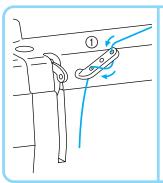

• Vérifier que le levier de relevage du fil se


\* Lorsqu'on utilise du polyester,


et que le pied-de-biche est relevé.

orifices du guide-fils.

trouve sur la position de levage maximale

faire passer le fil dans les trois

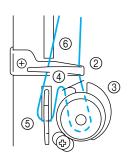

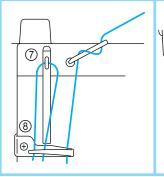


\* Si le fil est encore

le fil dans les orifices arrière.

le schéma.

torsadé, faire passer

comme indiqué sur







CONTENIDO Accessoires

Changement du pied-de- biche

(5) Relever le levier d'enfileur tout en tenant délicatement l'extrémité du fil.


# Utilisation de l'enfileur automatique

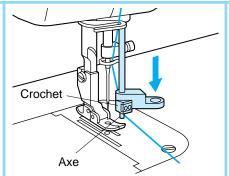

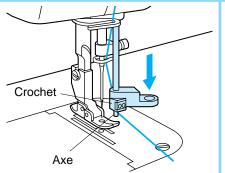




- (3) Abaisser l'enfileur automatique.
- \* Tirer le fil sur la droite de l'axe.



\* Tirer le fil vers la droite et s'assurer qu'il est bien pris dans le crochet.

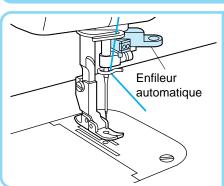



2 Tenir le fil de la main gauche, et le tirer légèrement vers l'avant.

1) Tirer le volant vers soi jusqu'à ce que

l'aiguille soit à la position de levage

maximal, et abaisser le pied-de-biche.

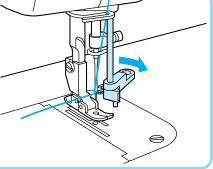

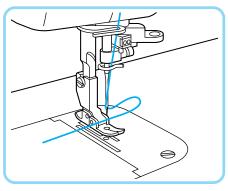



Fil
#30 #50 #60
#30
#30
#20


Certaines combinaisons de fil et d'aiguille ne permettent pas d'utiliser l'enfileur automatique, comme indiqué sur le tableau de gauche. Un fil de nylon transparent pourra être utilisé indépendamment des indications du tableau, à condition d'utiliser une aiguille #14 ou #16.

® Tirer la boucle vers la droite.

# Comment sortir le fil de la canette

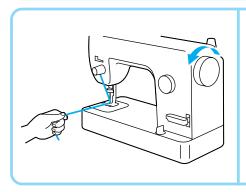

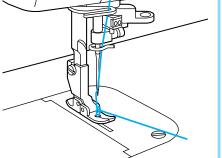

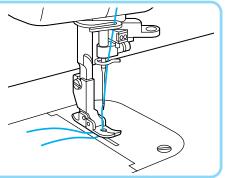

- \* Insérer la canette pleine dans la machine à coudre avant de commencer.
- ① Tout en tenant délicatement l'extrémité du fil, tourner le volant vers soi pour relever l'aiguille.
- \* Tourner une fois pour faire sortir le fil de la canette.
- ② Sortir le fil de la canette.


- ③ Sortir environ 15 centimètres de fil supérieur et de fil de canette.
- \* Relever le pied, sortir le fil supérieur et le fil de canette et les faire passer derrière le pied-de-biche.

# Points d'essai et tableau d'aiguilles

## Points d'essai


- ① Régler le sélecteur de longueur de point sur la longueur de point voulue.
- ② Vérifier qu'il y a environ 15 cm de fil supérieur et de fil de canette de sortis, et qu'ils sont placés derrière le pied-de-biche. L'aiguille étant en position relevée, mettre un morceau de tissu sous le pied-de-biche pour faire un essai.
- ③ Abaisser le pied-de-biche.
- ④ Abaisser l'aiguille sur le tissu, et appuyer délicatement sur la pédale pour commencer à coudre.

- ⑤ Relever l'aiguille à la position maximale.
- ⑥ Relever l'aiguille, enlever le tissu et couper le fil.
- \* Si l'on utilise les ciseaux :
- ⑤ Appuyer sur le bouton des ciseaux.
- ® Relever le pied et enlever le tissu.

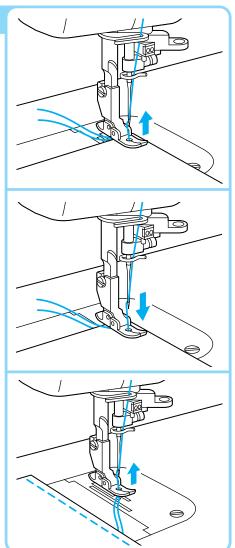

# **Tension des fils**

Le fil de canette doit être alimenté régulièrement. Régler le fil de canette en fonction de la tension du fil supérieur. (Si le fil de canette est trop serré, le tissu risque de se plisser.)

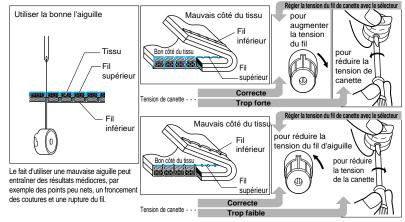

- Sélectionner l'aiguille qui convient pour le tissu et le fil.
- \* Le tableau ci-dessous s'applique à différentes méthodes de couture.

	·	•			
	Combinaisons tissu-fil-aiguille			HLX5	Schmetz
	Tissu	Fil	Aiguille (HLX5)	TILAS	130/705H
Tissu	Velours	Soie, polyester #30, #50	#11 – #14	#9	#65
spécial	Daim synthétique	Polyester #20, #50	#11 – #16	#11	#75
	Batiste	Coton #80		#14	#90
Tissu	Tricot	Polyester #60	#9	#16	#100
léger	Soie Georgette	Soie #50			
	Laine Georgette	Soie, polyester #50	#11		
Tissu	Vichy	Coton #60	#11 – #14		
moyen	Tricot léger, jersey	Polyester #80	#11		
illoyell	Gabardine, flanelle	Soie #50	#11		
Tissu	Jeans	Coton #20, #50	#14 – #18		
lourd	Jersey	Polyester #20, #50	411 410		
louid	Tweed	Soie #20, #50	#11 – #16		


- \* Il est recommandé d'utiliser des aiguilles HLX; toutefois, on pourra également utiliser des aiguilles Schmetz 130/705H dans des conditions normales d'utilisation.
- \* Régler la pression du pied-de-biche et la hauteur de chute du pied chute en fonction du tableau.
- \* Avec des tissus comme du tricot et du jersey, utiliser une aiguille à bille ou toute autre aiguille pour tricot.

Remarque Bien éteindre la machine avant de changer le pied-de-biche.

# Changement du pied-de-biche (pied pour fermeture à glissière)

- ① Relever le pied-de-biche et relever l'aiguille à la position maximale.
- ② Desserrer la vis à l'aide d'un tournevis et la retirer.
- ③ Fixer le pied pour fermeture à glissière et resserrer la vis.
- La méthode de changement est la même pour tous les pieds-debiche.

Utiliser le bouton de position au dos du pied pour fermeture à glissière pour régler la position du pied par rapport à l'aiquille.

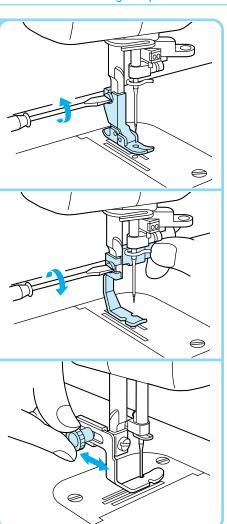

## Les différents pieds-de-biche

 Pied à ergot d'entraînement
 Pour obtenir des points parfaits sur des tissus difficiles comme le velours, le cuir et le daim.



Ce pied convient pour la plupart des travaux de couture. (Fourni avec la machine à coudre)

\* Peut également être utilisé avec un entraînement par ergot.


#### • Pied pour ourlet rouleauté


S'utilise sur les bords du tissu, par exemple pour des ourlets de chemises de soirée, de façon à replier le bord du tissu en trois pendant la couture.

Pied pour fermeture à glissière
 Permet de fixer des fermetures à
 glissière autres que les fermetures
 dissimulées.


 Pied pour fermeture à glissière invisible
 Permet de fixer des fermetures à glissière dissimulées.
















Nom des pièces

vant de nmencer

et de E

et tableau d'aiguilles


Changement du pied-de- biche

> outure de base


la machine à coudre

Dépannag


## Couture de base

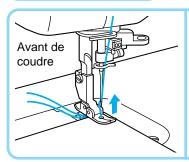

(1) Relever le pied-de-biche, sortir environ 15 cm de fil supérieur et de fil de canette et les faire passer derrière le pied-de-biche, puis placer le tissu sous le pied-de-biche.

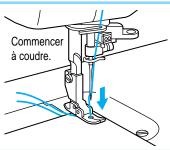

- ② Abaisser le pied-de-biche.
- ③ Quand l'aiguille a complètement traversé le tissu, appuyer doucement sur la pédale.

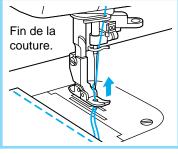


- (4) Relever l'aiguille au maximum.
- (5) Relever le pied-de-biche, retirer le tissu et couper le fil.
- \* Si l'on utilise le coupe-fil :
- Appuyer sur le bouton du coupe-fil (le fil supérieur et le fil de canette se coupent automatiquement et l'aiguille s'arrête en position relevée).
- (5) Relever le pied-de-biche et retirer le



- S'assurer que l'aiguille a complètement traversé le tissu.
- ② Relever le pied-de-biche et tourner le tissu en utilisant l'aiguille comme
- Abaisser le pied-de-biche et continuer à coudre.





Au début d'une couture, coudre quelques points avec le volant. appuyer sur le bouton de point arrière et faire quelques points en marche arrière pour renforcer la couture, puis revenir à la couture normale. Faire la même chose à la fin de la couture

# Entraînement par ergot (pour les tissus difficiles à manipuler)

Tissu: Velours, daim synthétique. autres


\* Les tissus ci-dessus

ergot.


seront plus faciles à

coudre avec un


entraînement par

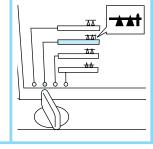

1) Mettre le bouton de réglage d'entraînement sur la position d'entraînement par ergot.





2 Régler le sélecteur de réglage de pression jusqu'à ce que l'aiquille de l'indicateur de pression se trouve sur la position voulue.

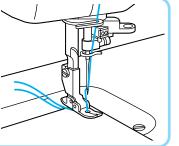

3 Tirer délicatement sur le fil jusqu'à ce que l'ergot d'entraînement attrape le tissu, et coudre.

# **Ergot d'entraînement**

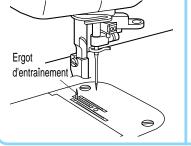

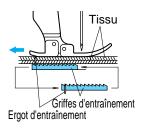

L'ergot d'entraînement remonte de façon à traverser toutes les épaisseurs de tissu et il se déplace sous l'effet du mouvement des griffes d'entraînement de manière à entraîner le tissu de facon uniforme.

\* L'ergot d'entraînement s'abaisse automatiquement guand on relève le pied-debiche.

CONTENIDO Accessoires

Couture de base

Entretien de la machine à coudre


Dépannage

# Couture de base (2)


Remarque Bien éteindre la machine avant de changer le pied-de-biche.

# Pied pour ourlet rouleauté


- 1) Fixer le pied pour ourlet rouleauté.
- \* Pour le changement des piedsde-biche, voir page 32.
- ② Enfoncer l'aiguille à environ 0,5 cm des bords du tissu et coudre 2 ou 3 points.
- ③ Relever l'aiguille et le pied-debiche, tirer le tissu vers soi tout en tenant délicatement le fil de la main gauche.

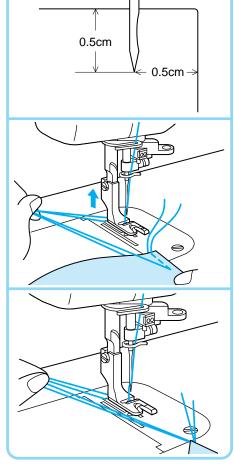

⑤ Tout en tenant les fils de la main gauche, placer le tissu sous le pied-de-biche de la main droite de façon que le bord du tissu se trouve directement sous l'aiguille.



⑦ Replier l'ourlet d'environ 0,5 cm et continuer à faire avancer l'ourlet replié sous le pied-debiche tout en cousant.

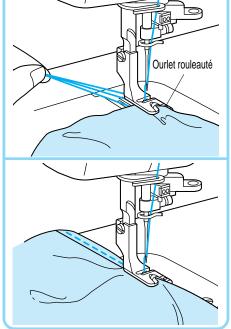

4 Tirer délicatement sur les brins du fil, comme indiqué.


# Couture de base (3)

### ▲ Remarque

Bien éteindre la machine avant de changer le pied-de-biche.


# Pied pour fermeture à glissière

- ① Fixer le pied pour fermeture à glissière.
- ② Tourner le volant pour abaisser l'aiguille et régler la position du pied par rapport à l'aiguille.
- ③ Placer la fermeture à glissière à l'endroit du tissu où elle doit être cousue, et marquer la base de l'ouverture sur le tissu. Elle devra se trouver à environ 0,5 cm en dessous de l'arrêt de la fermeture à glissière.
- ④ Replier l'ourlet à environ 0,2 cm de la marque, et tracer un trait le long du bord.

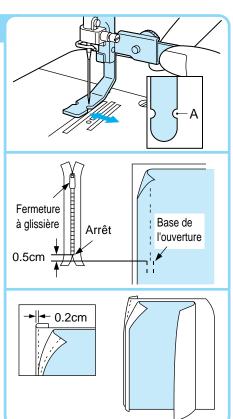


⑤ Coudre la fermeture à glissière sur le tissu le long du trait.

⑥ Aligner la couture repliée sur les points.



- ® Tourner le volant pour abaisser l'aiguille et vérifier que l'aiguille et la position du pied sont correctement alignées.
- ⑤ Faufiler la fermeture à glissière sur le tissu et coudre le long du bord, le tissu étant tourné sur l'endroit.
- \* Renforcer la base de l'ouverture en la cousant deux fois.
- \* Si la languette de la fermeture à glissière gêne la couture, enfoncer l'aiguille au maximum dans le tissu, relever le pied et déplacer la fermeture à glissière sur le côté.

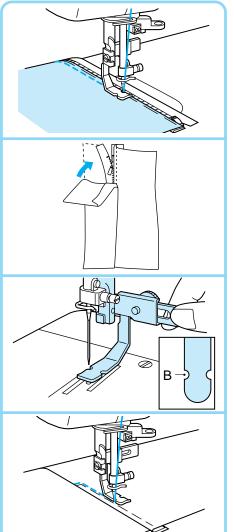

CONTENIDO Accessoires


Nom des pièces


Changement du pied-de- biche


# Pied pour fermeture à glissière invisible

- 1) Fixer le pied pour fermeture à glissière invisible.
- 2 Disposer la fermeture à glissière sur le tissu. Marquer la base de l'ouverture à environ 2 cm audessus de l'extrémité de la fermeture à glissière.
- 3 Replier la section à coudre.
- (4) Disposer la fermeture à glissière sur le tissu, sur l'envers du tissu, ouvrir la fermeture à glissière et faufiler la fermeture à glissière sur le tissu.

- (5) Coudre la fermeture à glissière sur le tissu, la fermeture à glissière et le tissu étant tournés sur l'envers.
- \* Si l'on effectue la couture avec les dents de la fermeture sur la droite, le côté gauche du pied devra être aligné sur les dents gauches de la fermeture à alissière.

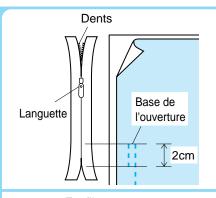


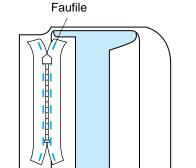


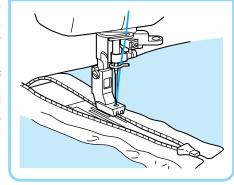


## **Doublure**

- 1) Relever l'aiguille et le pied-debiche.
- 2 Amener le séparateur sous le pied-de-biche.
- 3 Vérifier que le séparateur est placé de façon que l'aiguille traverse la fente du séparateur sans heurter la plaque.
- 4) Fixer la plaque de doublure à l'aide des vis de la plaque de doublure.
- ⑤ Régler la pression du pied-debiche et avancer le tissu sur la position d'entraînement par ergot.
- ® Tirer sur le fil jusqu'à ce que l'aiguille inférieure attrape le tissu.
- \* Coudre 2 ou 3 points de renfort.
- 7) Lorsqu'on ne se sert pas du séparateur, on pourra le replier sur le côté comme indiqué sur le schéma.

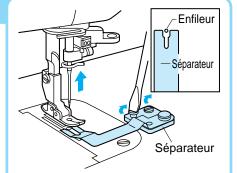

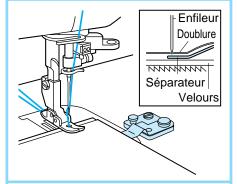

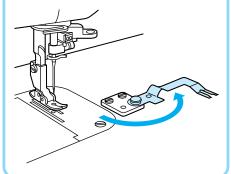



## **A** Remarque


Bien éteindre la machine avant de procéder au nettoyage de la machine à coudre.

- 1) Eteindre la machine.
- ② Retirer le pied-de-biche.
- ③ Retirer la plaque à aiguille.


- ④ Enlever la poussière et les restes de fil.
- Il est possible d'enlever les restes de fil par le volet de la canette.

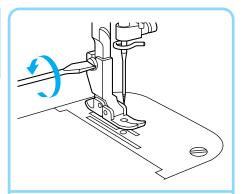

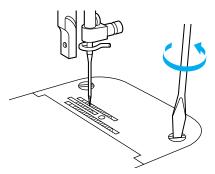

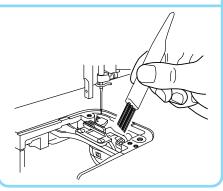

- ⑤ Lorsque la section sous la plaque à aiguille est nettoyée, graisser le crochet du boîtier de la canette avec de l'huile de machine à coudre.
- ⑥ Remettre la plaque à aiguille et le pied-de-biche en place.

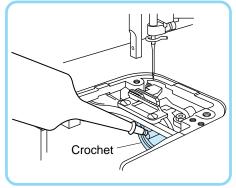

■ Maintenir la machine à coudre constamment propre Enlever la saleté légère et la poussière avec un chiffon doux et sec. Si la machine est très sale, l'essuyer avec un chiffon trempé dans de l'eau tiède, ou de l'eau tiède contenant un détergent neutre. Puis, enlever tout reste de détergent et essuyer avec un chiffon sec.


#### ■ Précautions

Eloigner la machine à coudre des sources de chaleur telles que fer à repasser et appareil de chauffage. Ne pas utiliser de produits chimiques tels que benzine ou diluant pour nettoyer la machine. Quand on ne se sert pas de la machine, la ranger à l'abri des rayons du soleil.



301611.			
Elément	Spécification	Elément	Spécification
Vitesse de couture	1000 11	Hauteur des griffes d'entraînement	0,7mm 1,1mm
(maximum)	1,300 points par minute	Hauteur d'aiguille	2
Longueur de	0 – 7mm	inférieure	3mm – 3,5mm
point (pas)	0 – / mm	Aiguilles qu'il est	HLX5#9 – #16
Course de	24.4 mm	possible d'utiliser	SCHMETZ 130/705H #65 - #100
l'aiguille	34,1mm	Dimensions du lit	439mmX178mm
Course du		Poids total	10kg
levier de	61,4mm	Moteur	120V 60Hz
relevage du fil		Lampe de couture	120V 15W 60Hz
Hauteur du Levage du pied-de-biche Un 6 i		Surface de	595mmX285mm
pied-de-biche	Deux 9 mm	couture	
pieu-ue-bicile	Commande au genou Plus de 10 mm		

# Dépannage

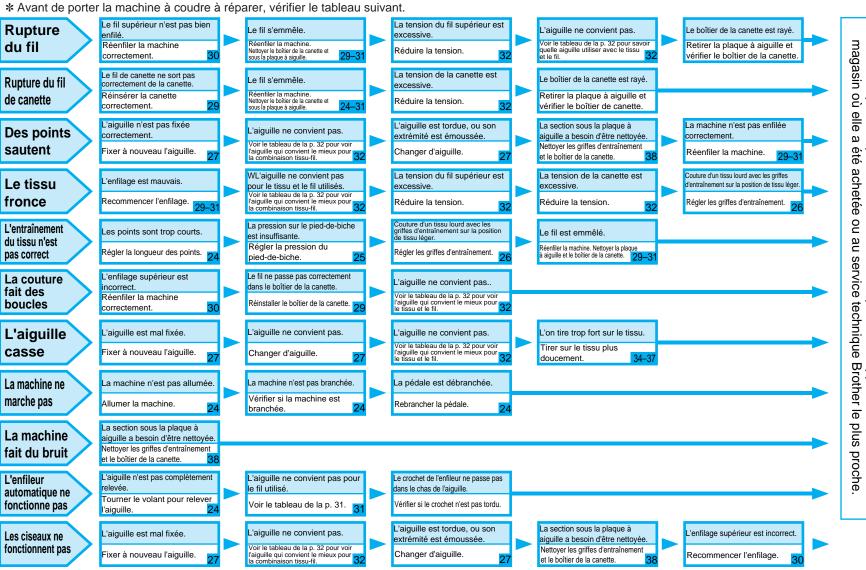

<u>ග</u> i l'on ne parvient pas été a) trouver a cause du problème, , apporter la θ Brother le ρ machine а

CONTENIDO Accessoires

Nom des pièces

Avant de commencer

Changement du pied-de- biche

Couture de base

Entretien de la machine à coudre

# This sheet only provides a summary of some important features related to the machine. Please refer to the Operation Manual for detailed information.


# **▲** Note

- For use with common 120V household current.
- To prevent machine overheating or potential fire hazards, please do not leave machine running when unattended


# **Main Parts and Functions**

	Part	Function	Page
1	Pressure Adjustment Dial	To adjust pressure of sewing feet against fabric being sewed.	4
2	Stitch Length Regulator	To adjust stitch length.	3
3	Needle Stop Position Button	To cancel needle stop position.	5
4	Reverse Stitch Lever	To sew in reverse.	3
(5)	Feed Dog Adjustment Knob	To adjust position of feed dogs.	5
6	Thread Cutter Button	To trim upper and bottom threads at end of seams.	5
7	Tension Dial	To adjust upper thread tension.	3, 11


\*For details, refer to the page indicated above in the Operation Manual.

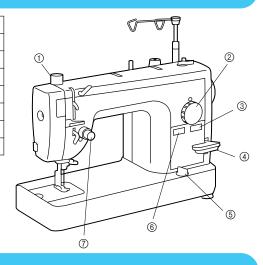

# **Threading**

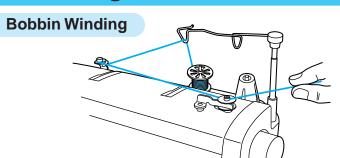





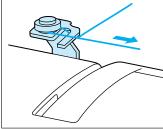



through triangular thread guide as shown in drawing. as shown in drawing.

Lift thread guide bar all the way up, and run thread Run thread through bobbin winding thread guide

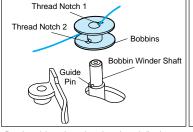

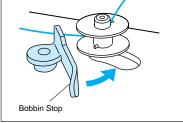

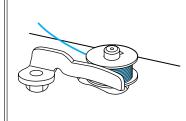

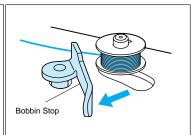


Run thread through top thread notch, and align bottom Press bobbin stop up against empty bobbin and step Stop winding when bobbin is full. Take foot of foot Manually move bobbin stop back to original position.

## Bobbin Insertion


#### **A** CAUTION

- Moving parts - To reduce risk of injuri, switch off before servicing. Replace cover.

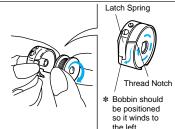

Put bobbin into the bobbin case.

spring, so that a length of about 10 centimeters the latch lever.





\* If the latch lever is not all the way on the hook, it may fly off during sewing and cause lower thread

## **Upper Threading**

#### ▲ Note


Please turn power is off before using automatic needle threader. Accidentally stepping on the foot controller during this operation could cause bodily injury or damage to the machine.

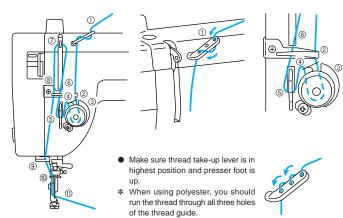

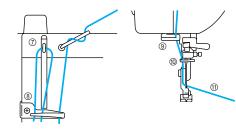


\* Refer to p. 9 of the Operation Manual for instructions on using the automatic needle threader.

## How to Pull Out the **Bobbin Thread**

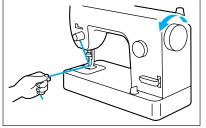


- \* Insert threaded bobbin in sewing machine and then
- ① While gently holding the end of the thread, turn the hand wheel towards you to raise the needle. \* Turn once to pull out the bobbin thread.

Pull out the bobbin thread

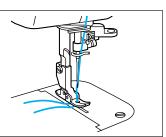


- (3) Pull approximately 15 centimeters of upper and bobbin threads out.
- \* Lift foot and run both upper and bobbin threads under and behind presser foot.

# **Foot Pressure and Feed Dog Positions**

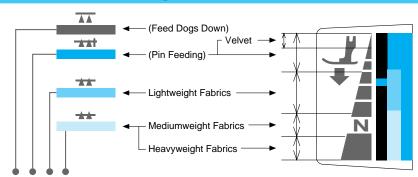


# **Thread Tension**

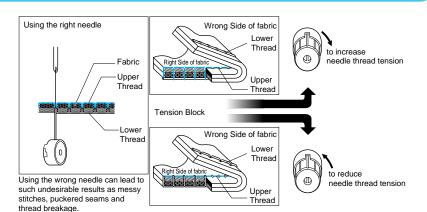


# **Changing the Needle**

- needle to highest position using hand wheel, and lower presser foot.
- ② Loosen screw with screwdriver, and remove needle.
- 3 Insert new needle, and tighten




#### **▲** Note

Please make sure power is off before carrying out the following operations. There is a chance of injury if the machine accidentally starts running dur-




# **Knee Lift**



Using the convenient knee lift enables you to lift the presser foot easily leaving your hands free to work

\* Push the knee control all the way in

# **Pin Feeding Unit**

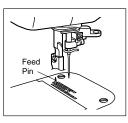

The feed pin passes up through all layers of fabric moving with the feed dog's motion to feed all layers of the fabric evenly.

Feed pin is automatically lowered when presser foot is raised

# Cette feuille ne fournit qu'un sommaire de certaines des principales fonctions de la machine. Pour les informations détaillées, se reporter au manuel d'utilisation.


# **A** Remarque

- Fonctionne sur un courant secteur 120 V domestique ordinaire.
- Pour éviter toute surchauffe de la machine et tout risque d'incendie, ne pas laisser la machine fonctionner lorsqu'on s'en éloigne ou qu'on ne s'en sert pas.


# Pièces principales et fonctions

	Pièces	Fonction	Page		
1	Sélecteur de réglage de pression	Pour régler la pression du pied-de-biche contre le tissu à coudre.	25		
2	Sélecteur de longueur de point	Pour régler la longueur des points.	24		
3	Bouton de position d'arrêt d'aiguille	Pour annuler la position d'arrêt de l'aiguille.	26		
4	Levier de point arrière	Pour coudre en marche arrière.	24		
(5)	Bouton de réglage des griffes d'entraînement	Pour régler la position des griffes d'entraînement.	26		
6	Bouton de ciseaux	Pour couper les fils supérieur et inférieur à la fin des coutures.	26		
7	Sélecteur de tension	Pour régler la tension du fil supérieur.	24, 32		


\*Pour les détails, se reporter à la page indiquée ci-dessus dans le manuel d'utilisation.

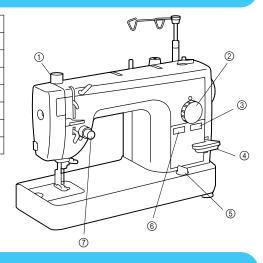

# **Enfilage**

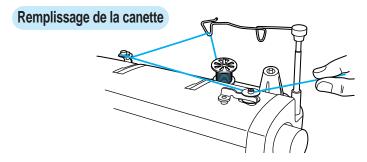





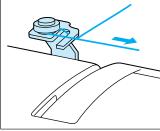



fil dans le guide-fils triangulaire comme indiqué sur le schéma. de canette comme indiqué sur le schéma.

Relever la barre de guidage du fil au maximum et faire passer le Faire passer le fil dans le guide-fils du remplissage

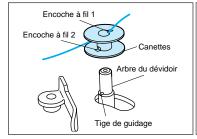





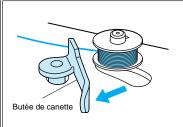


à fil inférieure sur la tige de guidage de l'arbre du dévidoir.

Faire passer le fil dans l'encoche à fil supérieure et aligner l'encoche . Appuyer sur la butée de canette contre la canette Cesser d'enrouler le fil lorsque la canette est pleine. De la main, ramener la butée de canette sur sa position d'origine.

# Insertion de la canette

#### **▲** Attention

Pour éviter tout risque de blessure, bien éteindre la machine avant toute opération d'entretien Remettre le couvercle en place.

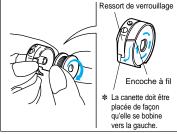

Mettre la canette dans le boîtier de la canette \* Faire passer le fil dans l'encoche à fil et sous le enfoncer le boîtier de la canette dans la coursière de ressort de verrouillage de facon qu'il ressorte navette et relâcher le levier de verrouillage. environ 10 centimètres de fil


Tirer sur le levier de verrouillage du boîtier de la canette


\* Si le levier de verrouillage n'est pas complètement sur le crochet, il risque de se dégager pendant la couture, ce qui pourrait casser le fil inférieur.

#### Mise en place du fil supéneur

#### ▲ Remarque


Bien éteindre la machine avant d'utiliser l'enfileur automatique. Une pression accidentelle sur la pédale pendant cette opération pourrait provoquer des blessures ou endommager la machine.

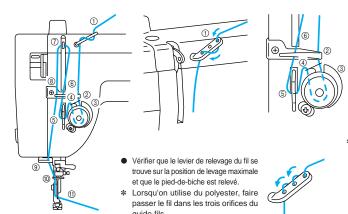

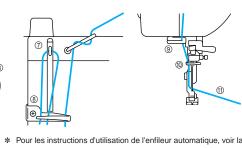


page 30 du manuel d'utilisation.


## Comment sortir le fil de la canette

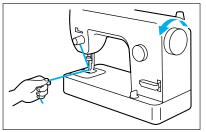

- \* Insérer la canette pleine dans la machine à coudre avant de commencer.
- ① Tout en tenant délicatement l'extrémité du fil, tourner le volant vers soi pour relever l'aiguille \* Tourner une fois pour faire sortir le fil de la canette




② Sortir le fil de la canette.

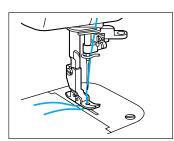


- 3 Sortir environ 15 centimètres de fil supérieur et de fil de canette.
- \* Relever le pied, sortir le fil supérieur et le fil de canette et les faire passer derrière le

# Pression du pied-de-biche et position des griffes d'entraînement

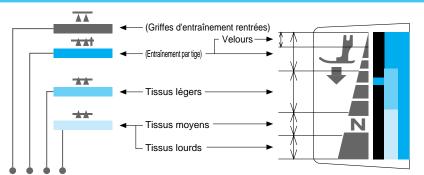


# **Tension des fils**

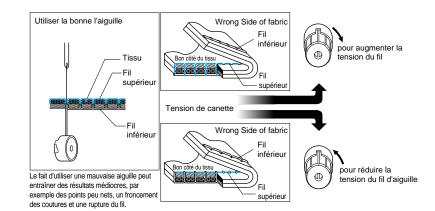


# Remplacement de l'aiguille

- ① Eteindre la machine. Relever l'aiguille sur la position de levage maximal à l'aide du volant, et abaisser le pied-de-biche.
- ② Desserrer la vis avec un tournevis et retirer l'aiguille
- 3 Insérer la nouvelle aiguille et visser à fond. S'assurer que l'aiguille est bien vissée à fond.



#### **▲** Remarque

Bien éteindre la machine à coudre avant d'effectuer les opérations suivantes. Sinon, la machine risque de se mettre en marche accidentellement et de provoquer des blessures.




# Levier de levage au genou



Le levier de levage au genou est pratique pour releve le pied-de-biche sans retirer les mains du tissu.

\* Appuyer à fond sur le levier de levage au genou.

# **Ergot d'entraînement**

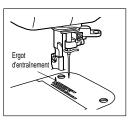

L'ergot d'entraînement remonte de façon à traverser toutes les épaisseurs de tissu et il se déplace sous l'effet du mouvement des griffes d'entraînement de manière à entraîner le tissu de facon uniforme.

\* L'ergot d'entraînement s'abaisse le pied-de-biche.